

# 3.1.3 Trustzone Getting Started with Harmony v3 Drivers on PIC32CK SG MCU Using FreeRTOS

[Download](#)

## Description


This application demonstrates the use of the PIC32CK SG01 microcontroller (MCU) with a driver and FreeRTOS in the Non-secure region.

- The application reads the current room temperature from the I/O1 Xplained Pro Extension Kit sensor every second. It then converts the raw temperature data into readable values and displays the converted temperature values on the serial console.
- Additionally, the Non-secure mode application stores the temperature readings in the EEPROM. When a key is pressed on the serial console, the application can display the last five stored temperature values from the EEPROM on the console. An LED (LED0) toggles each time the temperature is displayed on the serial console.

## Modules/Technology Used

- Peripheral Modules
  - Non-secure TCC0
  - Non-secure DMAC
  - Non-secure PORT Pin (LED0)
- Driver Modules
  - Non-secure USART
  - Non-secure I2C
- System Services
  - Time
- Core

The MCC Harmony project graph with all the components would look like this:

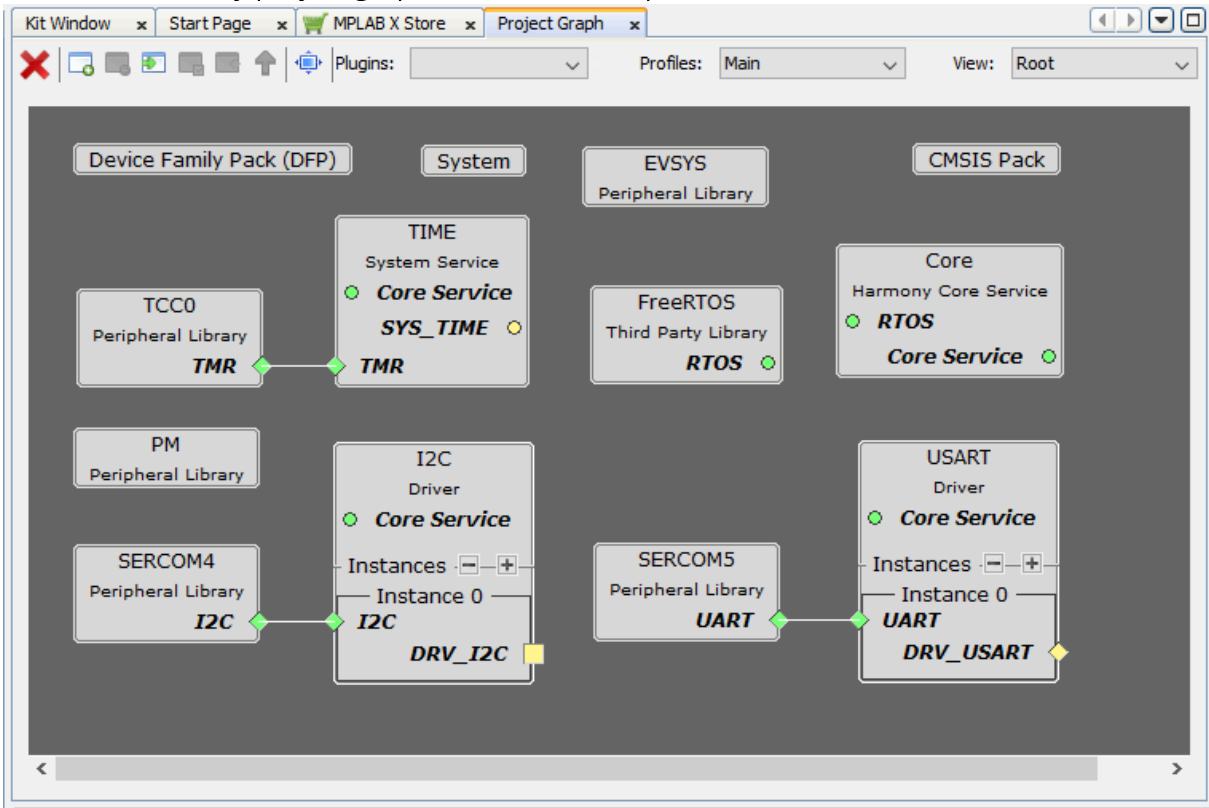

## Hardware Used

- [PIC32CK SG Curiosity Ultra Development Board](#)
- [I/O1 Xplained Pro Extension Kit](#)

## Software/Tools Used


Refer [Project Manifest](#) present in harmony-manifest-success.yml under the project folder *firmware/src/config/pic32ck\_sg01\_cult*

- Refer the [Release Notes](#) to know the **MPLAB X IDE** and **MCC** Plugin version.
- Any Serial Terminal application like Tera Term/PuTTY terminal application.

Because Microchip regularly update tools, occasionally issue(s) could be discovered while using the newer versions of the tools. If the project doesn't seem to work and version incompatibility is suspected, It is recommended to double-check and use the same versions that the project was tested with. To download original version of MPLAB Harmony v3 packages, refer to document [How to Use the MPLAB Harmony v3 Project Manifest Feature](#)

Hardware Setup

- The PIC32CK SG01 Curiosity Ultra Development Board allows the Embedded Debugger (PKoB4) to be used for debugging.
- Connect the PIC32CK SG01 Curiosity Ultra Development Board to the host PC using a Type-A male to micro-B USB cable. Plug the cable into the Micro-B USB (Debug USB) port on the Development Board.
- To test the functionality, connect the [I/O1 Xplained Pro Extension Kit](#) to the extension header EXT1 (J500) on the PIC32CK SG01 Curiosity Ultra Development Board.

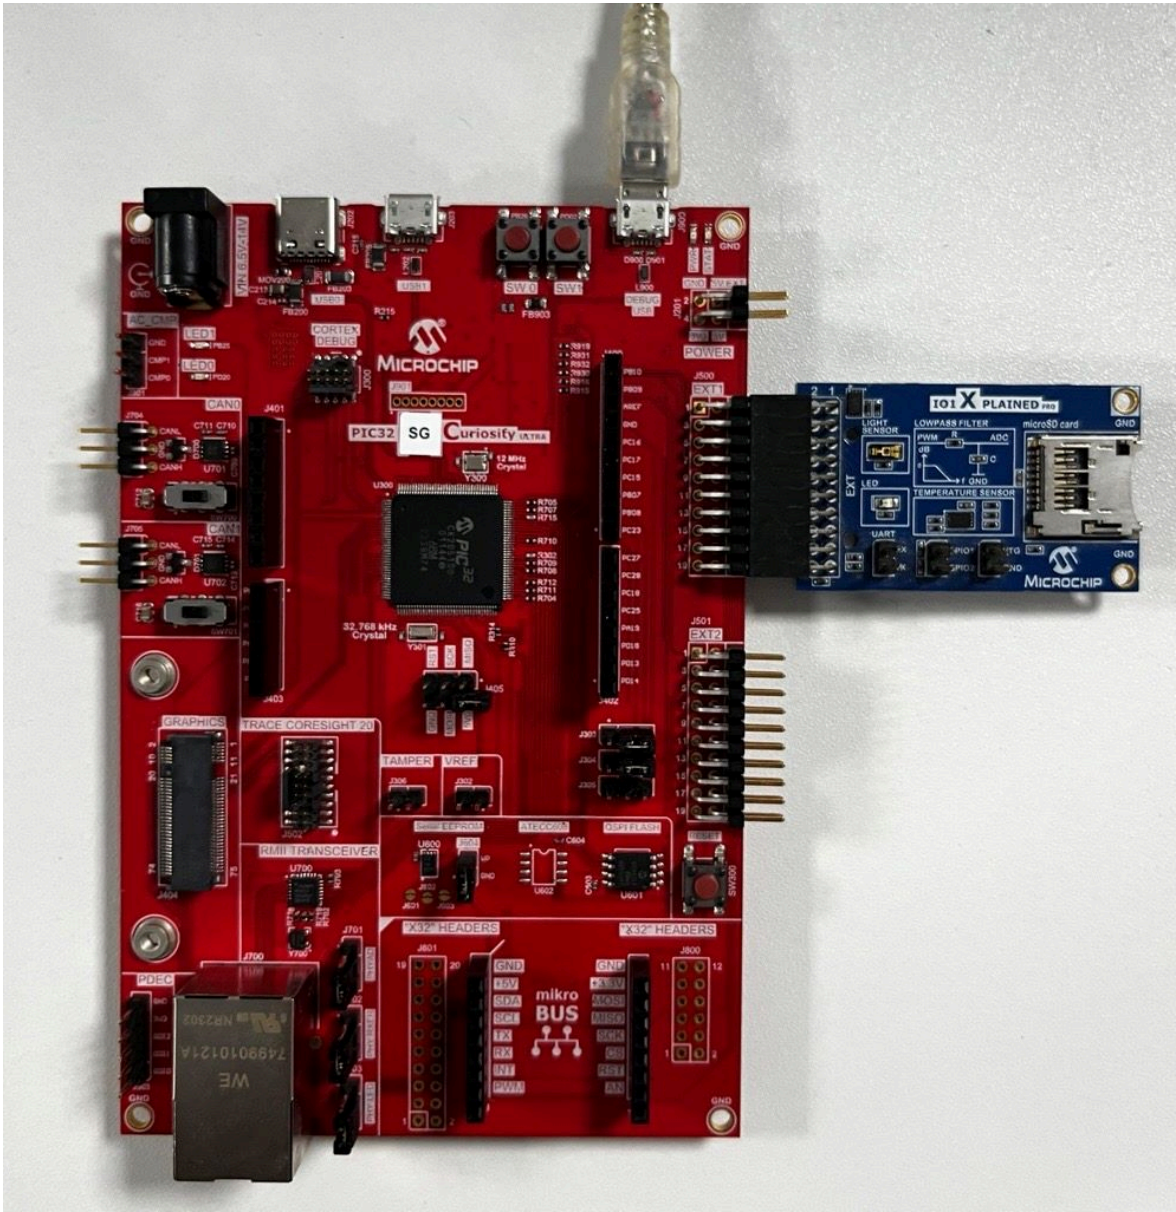

Programming hex file

The pre-built hex file can be programmed by following the below steps.


Steps to program the hex file

- Open MPLAB X IDE
- Close all existing projects in IDE, if any project is opened.
- Go to File -> Import -> Hex/ELF File
- In the "Import Image File" window, Step 1 - Create Prebuilt Project, Click the "Browse" button to select the prebuilt hex file.
- Select Device has "PIC32CK2051SG01144"
- Ensure the proper tool is selected under "Hardware Tool"
- Click on Next button
- In the "Import Image File" window, Step 2 - Select Project Name and Folder, select appropriate project name and folder
- Click on Finish button
- In MPLAB X IDE, click on "Make and Program Device" Button. The device gets programmed in sometime
- Follow the steps in "Running the Demo" section below

Programming/Debugging Application Project

- Open the project (pic32ck\_sg01\_cult\_get\_start\_freertos/firmware/get\_start\_freertos\_pic32ck\_sg01\_cultgroup) in MPLAB X IDE
- Right click on "get\_start\_freertos\_pic32ck\_sg01\_cultgroup" file and go to Open Required projects > Open All Projects.
- Then right click on the Non-secure project (*get\_start\_freertos\_pic32ck\_sg01\_cult*) and click **Set as Main Project**.




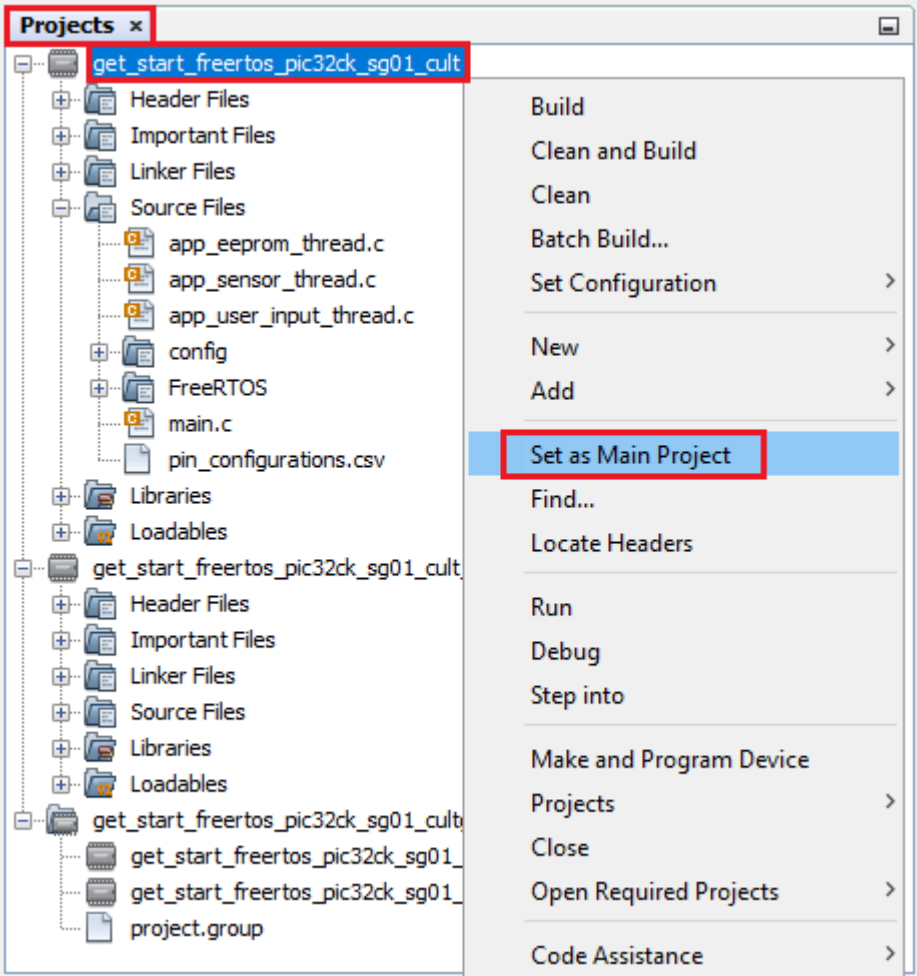


- Ensure "PIC32CK SG01 Curiosity Ultra" is selected as hardware tool to program/debug the application
- Build the code and program the device by clicking on the "make and program" button in MPLAB X IDE tool bar
- Follow the steps in "Running the Demo" section below

Running the Demo

- Open the Tera Term/PuTTY terminal application on your PC (from the Windows® Start menu by pressing the Start button)
- Set the baud rate to 115200
- An LED0 on the PIC32CK SG01 Curiosity Ultra Development Board is toggles continuously using the System Timer as shown in the below figure.

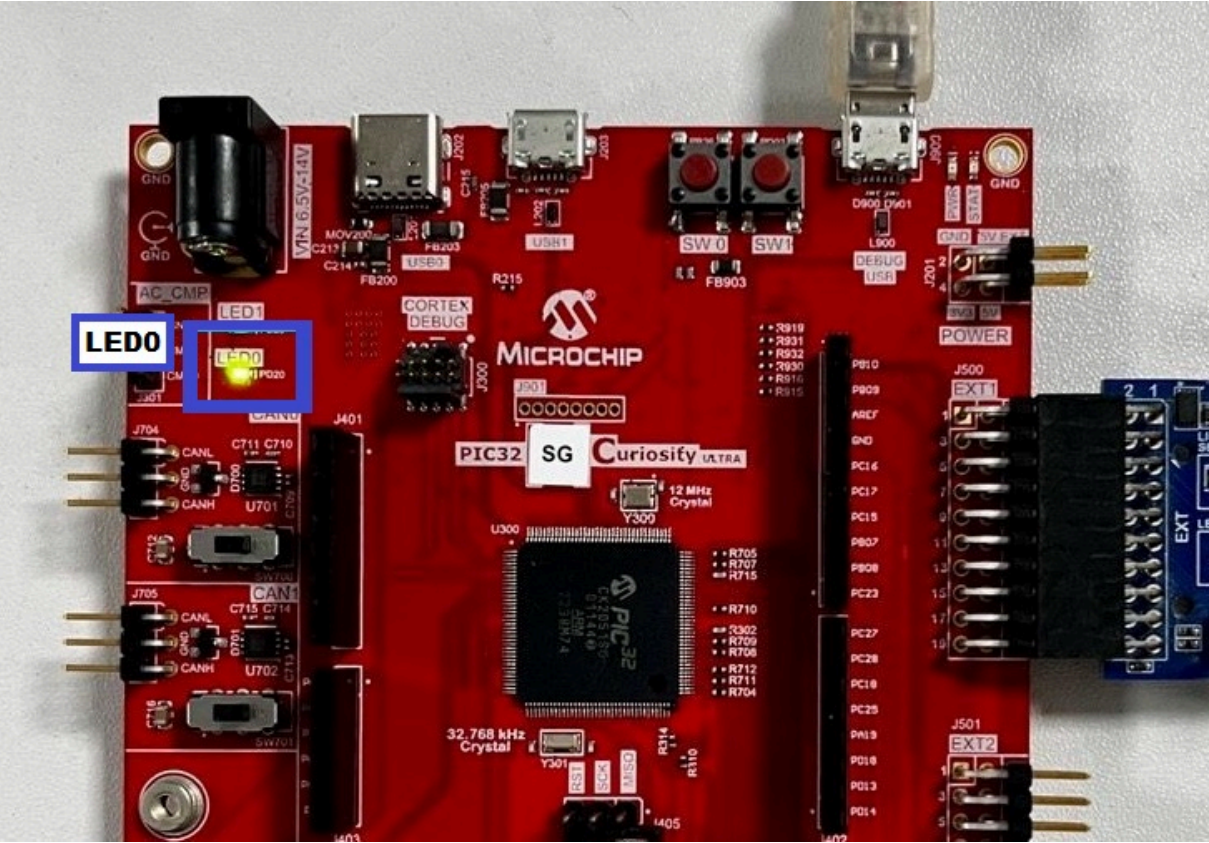

- The LED0 should be blinking and the temperature values (in °F) being displayed on the terminal every 1 second, as shown below.

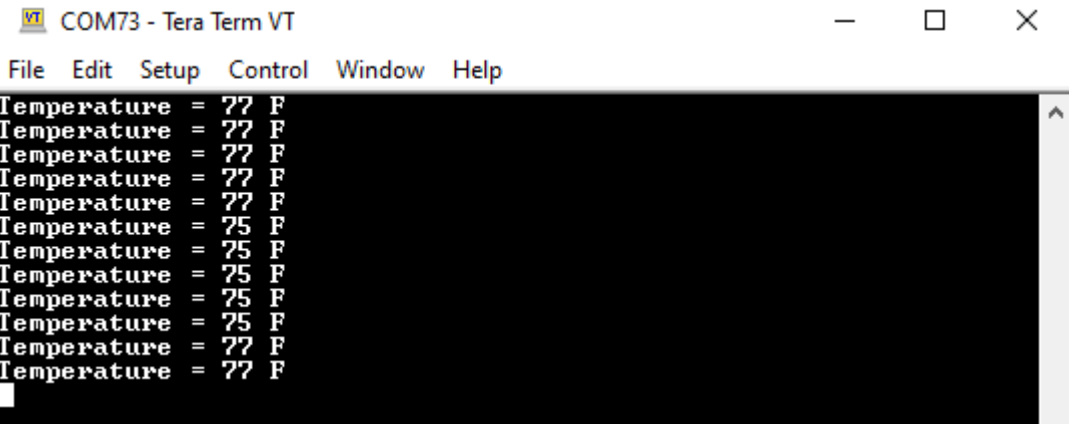

- Press any character on the terminal to display the last five values written to the EEPROM.


VT COM73 - Tera Term VT

File Edit Setup Control Window Help

Temperature = 78 F  
Temperature = 77 F  
Temperature = 77 F  
Temperature = 78 F  
Temperature = 77 F  
EEPROM: 78F177F177F178F177F!  
Temperature = 77 F  
Temperature = 77 F  
Temperature = 77 F  
Temperature = 77 F

← Values read from EEPROM

- You may vary the temperature by placing your finger on the temperature sensor on the I/O1 Xplained Pro Extension Kit (for a few seconds).

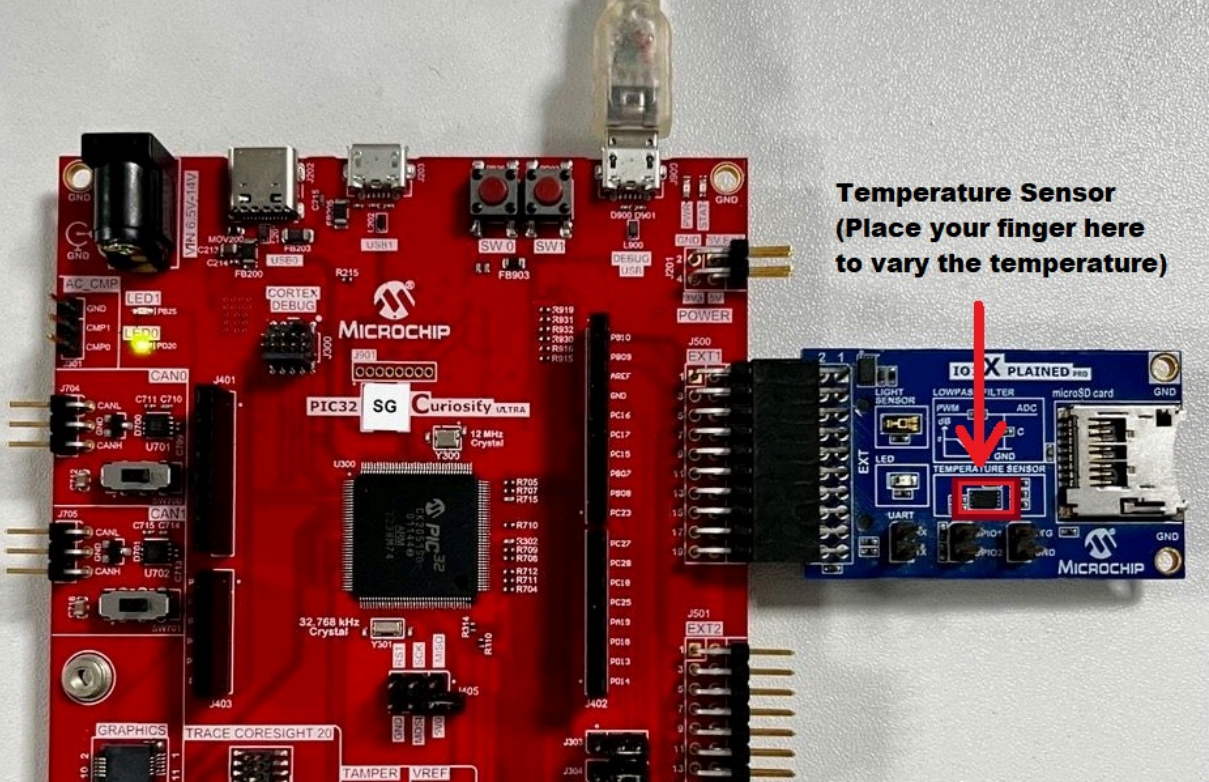

Comments

- [Dual Developer Application Development Use Case with TrustZone on SAM L11 Using MPLAB Harmony v3](#) (DS90003306)
  - **Note:** Though this technical brief is on SAM L11 MCUs, the TrustZone concepts it describes also applies to PIC32CK SG01 MCUs.
- This application demo builds and works out of box by following the instructions above in "Running the Demo" section. If you need to enhance/customize this application demo, you need to use the MPLAB Harmony v3 Software framework. Refer links below to setup and build your applications using MPLAB Harmony.
  - [How to Setup MPLAB Harmony v3 Software Development Framework](#) (DS90003232)
  - [How to Build an Application by Adding a New PLIB, Driver, or Middleware to an Existing MPLAB Harmony v3 Project](#) (DS90003253)
  - [Video - How to Set up the Tools Required to Get Started with MPLAB® Harmony v3 and MCC](#)
  - [Create a new MPLAB Harmony v3 project using MCC](#)
  - [Update and Configure an Existing MHC-based MPLAB Harmony v3 Project to MCC-based Project](#)