
How to Use the SAMA5D2 UART Under Linux®

Introduction

This application note describes how to get started using the SAMA5D2 UART under Linux.

In the kernel, the UART driver is implemented based on the TTY (TeleTYewriter) framework. Many types of terminal drivers are based on TTY, and the UART device is registered as a ttySx character device ('x' stands for the device number).

Besides the standard character device node interface (open(), read(), write()...), the TTY framework has its own set of interface functions for special features. For information about accessing a ttySx device, refer to the section [Application](#).

Reference Documents

Title	Reference	Available
SAMA5D2 Series Datasheet	DS60001476	https://www.microchip.com/design-centers/32-bit-mpus
SAMA5D27 SOM1 Kit1 User Guide	DS50002667	https://www.microchip.com/DevelopmentTools/ProductDetails/PartNO/ATSAMA5D27-SOM1-EK1

Prerequisites

- Hardware
 - PC
 - SAMA5D27 SOM1 Evaluation Kit (Part Number: ATSAMA5D27-SOM1-EK1)
 - SDCard
 - USB-to-serial cable (TTL level)
- Software

This demo runs on the AT91 Linux platform built by Buildroot. The first step is to set up the AT91 Buildroot development environment. Refer to the web site: <http://www.at91.com/linux4sam/bin/view/Linux4SAM/BuildRoot>


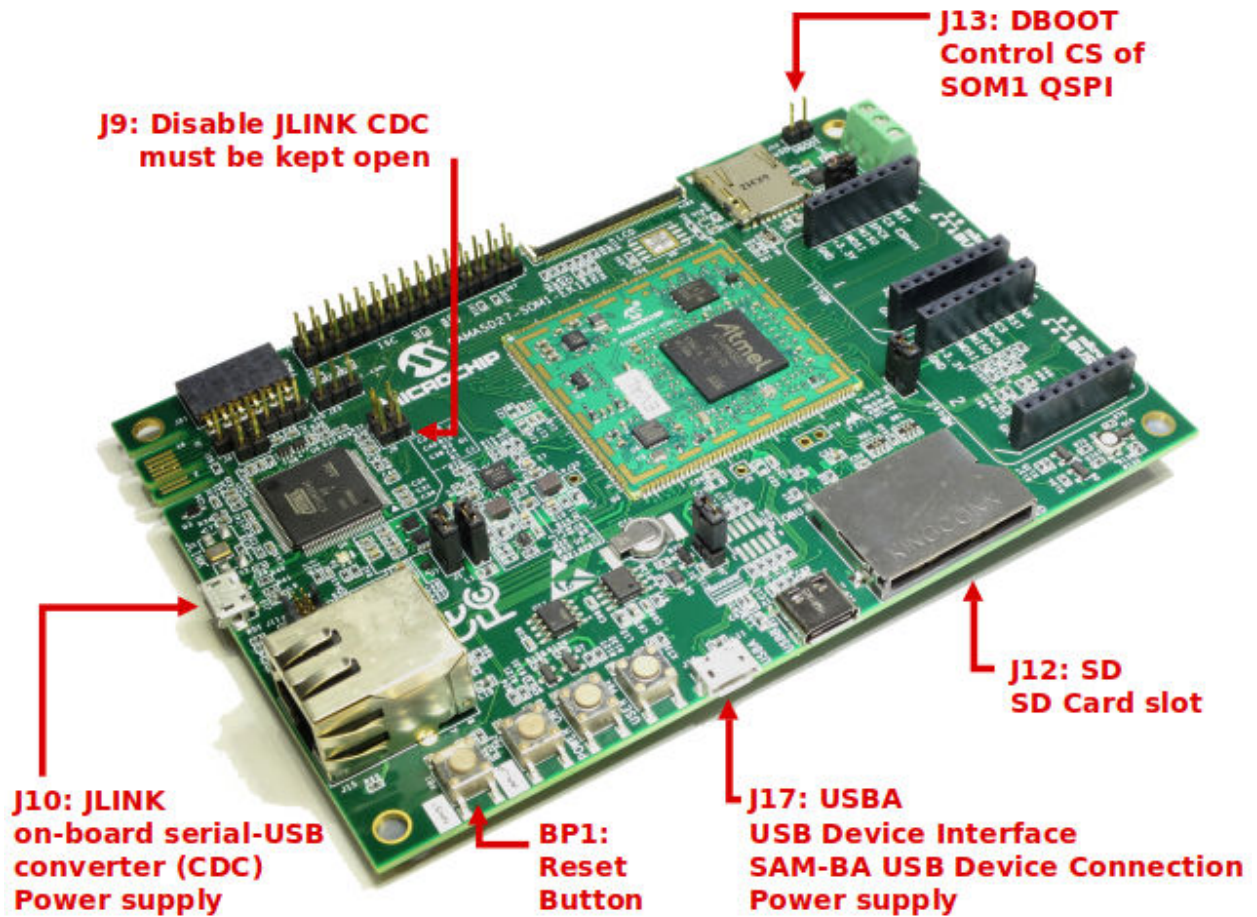


Table of Contents

Introduction.....	1
Reference Documents.....	1
Prerequisites.....	1
1. Hardware Design.....	4
1.1. Interface.....	4
1.2. Connection.....	4
2. Software Design.....	6
2.1. Device tree.....	6
2.2. Kernel.....	7
2.3. Rootfs.....	8
2.4. Application.....	8
3. Hands-On.....	10
4. Tools and Utilities.....	11
5. Revision History.....	12
5.1. Rev. A - 11/2019.....	12
The Microchip Website.....	13
Product Change Notification Service.....	13
Customer Support.....	13
Microchip Devices Code Protection Feature.....	13
Legal Notice.....	13
Trademarks.....	14
Quality Management System.....	14
Worldwide Sales and Service.....	15

1. Hardware Design

1.1 Interface

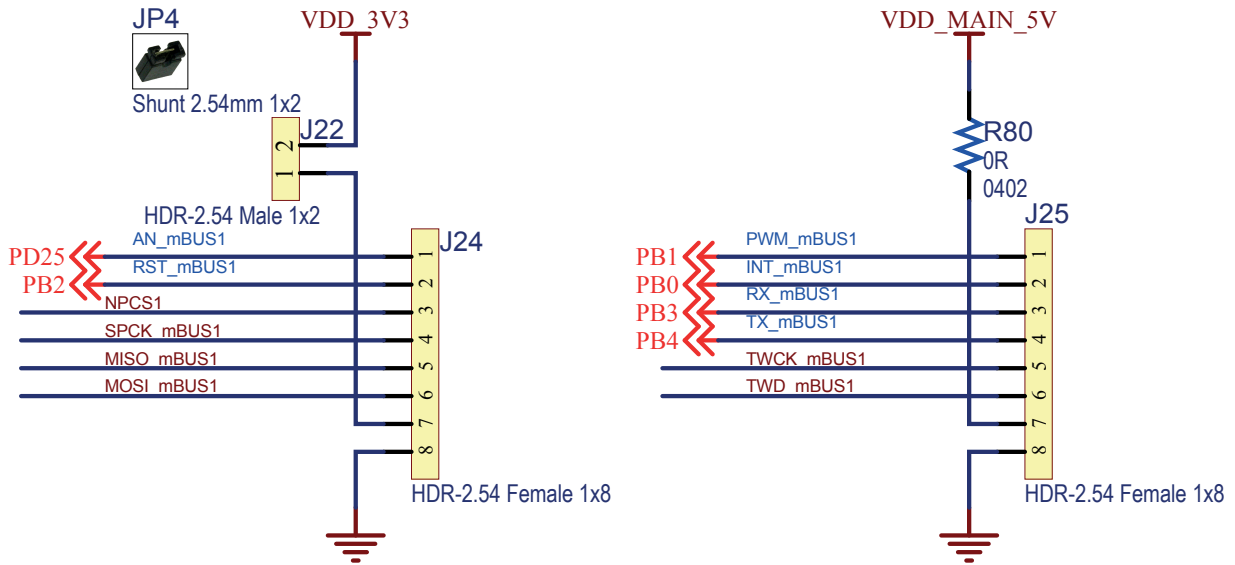

The connector mikroBUS1 is used for easy testing and monitoring.

This application note describes how to control UART under Linux.

UART4 is connected to the UART bus in mikroBUS 1 on SAMA5D27-SOM-EK1:

- URXD4 → PB3 → RX_mBUS1
- UTXD4 → PB4 → TX_mBUS1

For more details about the pin multiplexing of the SAMA5D2, refer to the table “Pin Description (all packages)” in the SAMA5D2 data sheet.

1.2 Connection


Connect UART4 of mikroBUS1 to the PC using the USB-to-serial cable (TTL level):

J25_3 RX_mBUS1 → TXD

J25_4 TX_mBUS1 → RXD

J25_8 GND → GND

Refer to the following picture.

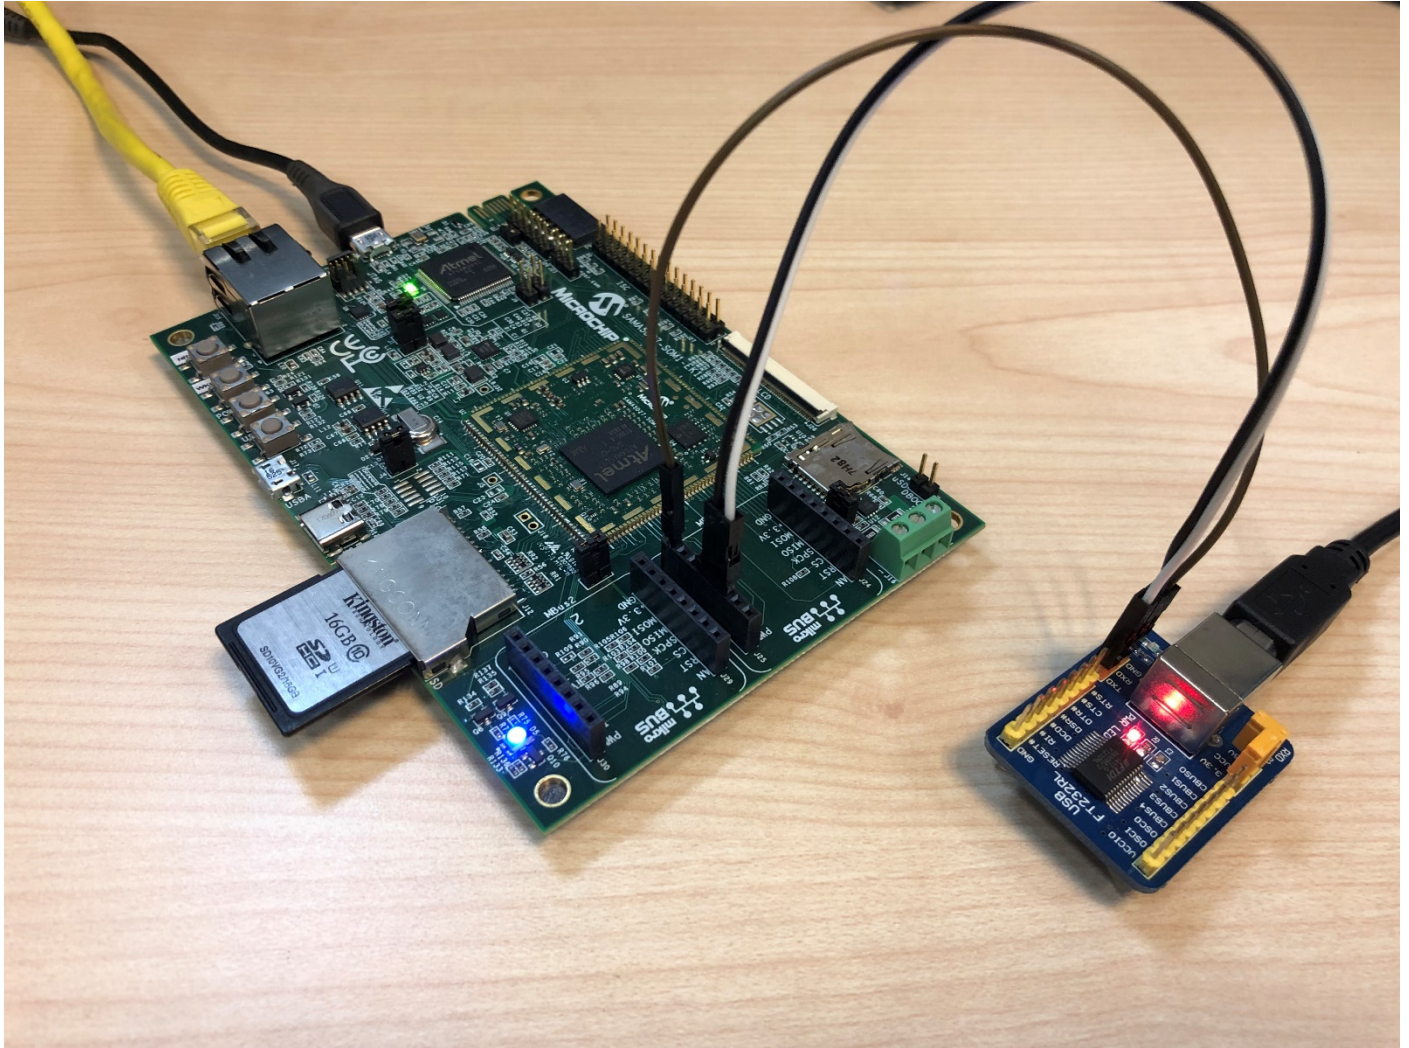

2. Software Design

The Microchip Linux platform was built using Buildroot with the following configuration:

```
atmel_sama5d27_som1_ek_mmc_dev_defconfig
```

The UART device driver should work with this default configuration without any adjustment.

2.1 Device tree

- Action: no need to change
- Location: buildroot-at91/output/build/linux-linux4sam_6.0/arch/arm/boot/dts
- Sources:
 - sama5d2.dtsi
 - at91-sama5d27_som1_ek.dts

Device tree for UART4 in sama5d2.dtsi:

```
uart4: serial@fc00c000 {
    compatible = "atmel,at91sam9260-usart";

    // specify which driver will be used for this UART device

    reg = <0xfc00c000 0x100>;
    // uart4 base address is 0xfc00c000, size is 0x100

    dmas = <&dma0
    // two dma channel will be used for tx and rx

    (AT91_XDMAC_DT_MEM_IF(0) | AT91_XDMAC_DT_PER_IF(1) |
    AT91_XDMAC_DT_PERID(43))>,
    <&dma0
    (AT91_XDMAC_DT_MEM_IF(0) | AT91_XDMAC_DT_PER_IF(1) |
    AT91_XDMAC_DT_PERID(44))>;
    dma-names = "tx", "rx";
    interrupts = <28 IRQ_TYPE_LEVEL_HIGH 7>;

    // PID of UART4 is 28, high level triggered, priority is 7

    // used to configure UART4 interrupt in AIC

    clocks = <&uart4_clk>;
    // definition for uart4 clock source

    clock-names = "usart";
    status = "disabled";

    // default disabled, and will be replaced with "okay"

};
uart4_clk: uart4_clk {
    #clock-cells = <0>;
    reg = <28>;

    // PID of UART4 is 28, this definition of offset will be used to enable uart4 clock in PMC
```



```

atmel,clk-output-range = <0 83000000>;
    // uart4 input clock, max frequency is 83MHz

};

```

Device tree for UART4 in at91-sama5d27_som1_ek.dts:

```

aliases {
    serial0 = &uart1; /* DBGU */
    serial1 = &uart4; /* mikro BUS 1 */

    // the aliases of uart4 is serial1, then uart4 will be registered as ttyS1

    serial2 = &uart2; /* mikro BUS 2 */
    i2c1 = &i2c1;
    i2c2 = &i2c2;
    uart4: serial@fc00c000 {
        atmel,use-dma-rx;

        // With this definition DMA feature will be enabled for rx

        atmel,use-dma-tx;

        // With this definition DMA feature will be enabled for tx

        pinctrl-names = "default";
        pinctrl-0 = <&pinctrl_mikrobus1_uart>;

        // pin definition for uart4

        status = "okay";

        // replace status's property with "okay", enable uart4 device

    };
    pinctrl_mikrobus1_uart: mikrobus1_uart {
        pinmux = <PIN_PB3__URXD4>,

        // the mux of PB3 will be switched to URXD4

        <PIN_PB4__UTXD4>;

        // the mux of PB4 will be switched to UTXD4

        bias-disable;

        // pull up/down feature disabled

    };
};

```

2.2 Kernel

- Action: no need to change
- Location: buildroot-at91/output/build/linux-linux4sam_6.0/
- Defconfig: sama5_defconfig
- Driver files: drivers/tty/serial/atmel_serial.c

Check the kernel configuration for the UART function:

```
user@at91:~/buildroot-at91$ make linux-menuconfig
```

Device Drivers > Multifunction device drivers > AT91 USART Driver

Some Microchip USART controllers are compatible with the SPI function, but the UART module does not support this feature. With the default setting, a UART device is added via this mfd driver.

```
.config - Linux/arm 4.14.73-linux4sam 6.0 Kernel Configuration
> Device Drivers > Multifunction device drivers
Multifunction device drivers
Arrow keys navigate the menu. <Enter> selects submenus ---> (or empty submenu ----). Highlighted letters are
hotkeys. Pressing <Y> includes, <N> excludes, <M> modularizes features. Press <Esc><Esc> to exit, <?> for Help, </>
for Search. Legend: [*] built-in [ ] excluded <M> module < > module capable

<*> Active-semi ACT8945A
[ ] AMS AS3711
< > ams AS3722 Power Management IC
[ ] Analog Devices ADP5520/01 MFD PMIC Core Support
[ ] AnalogicTech AAT2870
[*] AT91 USART Driver
<*> Atmel Flexcom (Flexible Serial Communication Unit)
<*> Atmel HLCDC (High-end LCD Controller)
< > Broadcom BCM590xx PMUs
< > ROHM BD9571MWV PMIC
< > X-Powers AXP series PMICs with I2C
< > ChromeOS Embedded Controller
```

Device Drivers > Character devices > Serial drivers > AT91 on-chip serial port support

Driver for the AT91 UART port.

```
.config - Linux/arm 4.14.73-linux4sam 6.0 Kernel Configuration
> Device Drivers > Character devices > Serial drivers -
Serial drivers
Arrow keys navigate the menu. <Enter> selects submenus ---> (or empty submenu ----). Highlighted letters are
hotkeys. Pressing <Y> includes, <N> excludes, <M> modularizes features. Press <Esc><Esc> to exit, <?> for Help, </>
for Search. Legend: [*] built-in [ ] excluded <M> module < > module capable

< > 8250/16550 and compatible serial support
*** Non-8250 serial port support ***
[ ] Early console using ARM semihosting
[*] AT91 on-chip serial port support
[*] Support for console on AT91 serial port
[*] Support DMA transfers on AT91 serial port
[ ] Install as device ttyATn instead of ttySn
< > MAX3100 support
< > MAX310X support
< > Xilinx uartlite serial port support
< > SCCNXP serial port support
```

2.3 Rootfs

- Action: no need to change
- Location: buildroot-at91/output/images/rootfs.tar

As mentioned in [2.1 Device tree](#), UART4 will be registered as ttyS1.

Use the following device node to access the UART4 port driver:

- /dev/ttyS1

2.4 Application

This section provides a C language demo used to access the UART port driver.

How to Compile

```
user@at91:~$ buildroot-at91/output/host/bin/arm-buildroot-linux-uclibcgnueabi-hf-gcc uart.c -o
uart_test
```

Source Code

```
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <fcntl.h>
```



```
#include <termios.h>
#include <string.h>

#define DEV_TTY "/dev/ttyS1"
#define BUF_SIZE 256

int main(int argc, char *argv[])
{
    int fd;
    int ret;
    char tx_buf[] = "Hello World!\n\r";
    char rx_buf[BUF_SIZE] = "";
    struct termios options;

    /* open uart */
    fd = open(DEV_TTY, O_RDWR|O_NOCTTY);
    if (fd < 0) {
        printf("ERROR open %s ret=%d\n\r", DEV_TTY, fd);
        return -1;
    }
    /* configure uart */
    tcgetattr(fd, &options);
    options.c_cflag &= ~PARENB;
    options.c_cflag &= ~CSTOPB;
    options.c_cflag &= ~CSIZE;
    options.c_cflag |= CS8;
    options.c_cc[VTIME] = 10; // read timeout 10*100ms
    options.c_cc[VMIN] = 0;
    options.c_lflag &= ~(ICANON | ECHO | ECHOE | ISIG);
    options.c_oflag &= ~OPOST;
    options.c_iflag &= ~(ICRNL | IXON);
    cfsetispeed(&options, B115200);
    cfsetospeed(&options, B115200);
    options.c_cflag |= (CLOCAL | CREAD);
    tcflush(fd, TCIFLUSH);
    tcsetattr(fd, TCSANOW, &options);

    while (1) {
        /* read uart */
        while ((ret = read(fd, rx_buf, BUF_SIZE-1)) > 0) {
            puts(rx_buf);
            memset(rx_buf, 0, ret);
        }
        /* write uart */
        ret = write(fd, tx_buf, sizeof(tx_buf));
        if (ret != sizeof(tx_buf))
            printf("ERROR write ret=%d\n", ret);
    }

    /* close uart */
    close(fd);


    return 0;
}
```

3. Hands-On

Copy the `uart_test` application and execute it, then the UART waveform is monitored on the mBUS1 UART port.

```
# chmod +x uart_test  
# ./uart_test
```

Open the COM port of the USB-to-serial cable. The following displays:

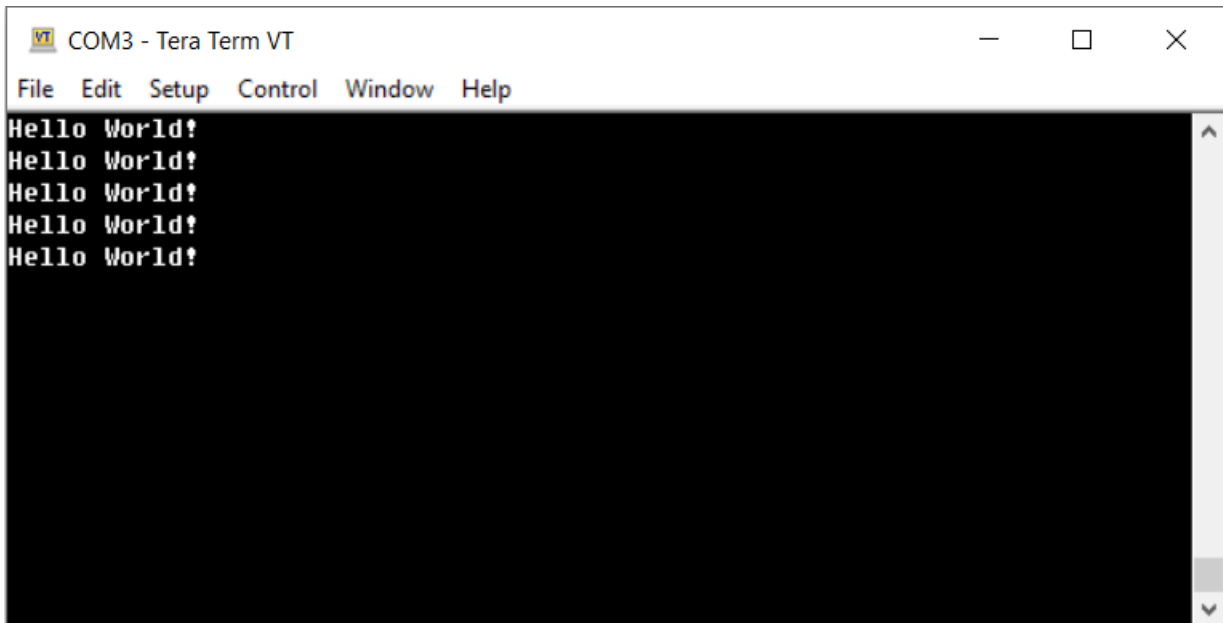


4. Tools and Utilities

microcom is a tool for UART port testing included in Buildroot.

With the default Buildroot configuration, this tool is selected.

```
user@at91:~/buildroot-at91$ make busybox-menuconfig
```


Miscellaneous Utilities > microcom

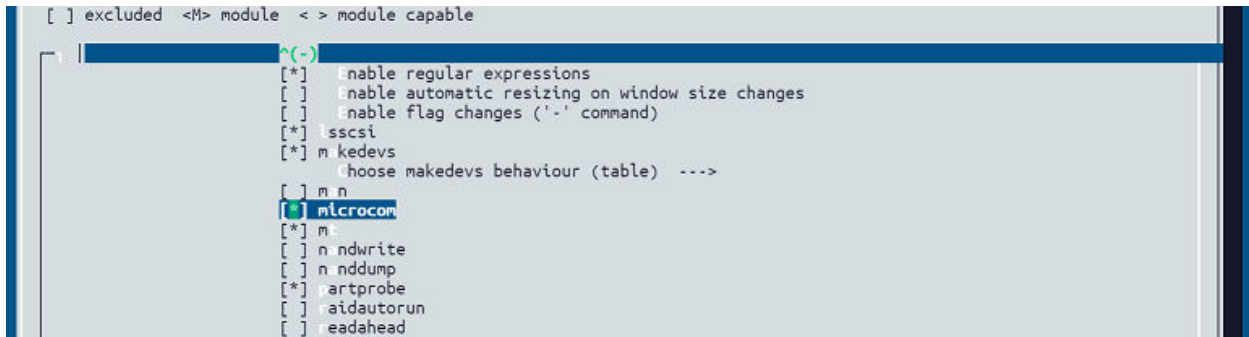

Execute the following command on the target board (Ctrl + X to exit), then type any string.

```
# microcom -s 115200 /dev/ttyS1
Type "Hello World!"
```

If uart4 is connected to the PC COM port, the following displays:

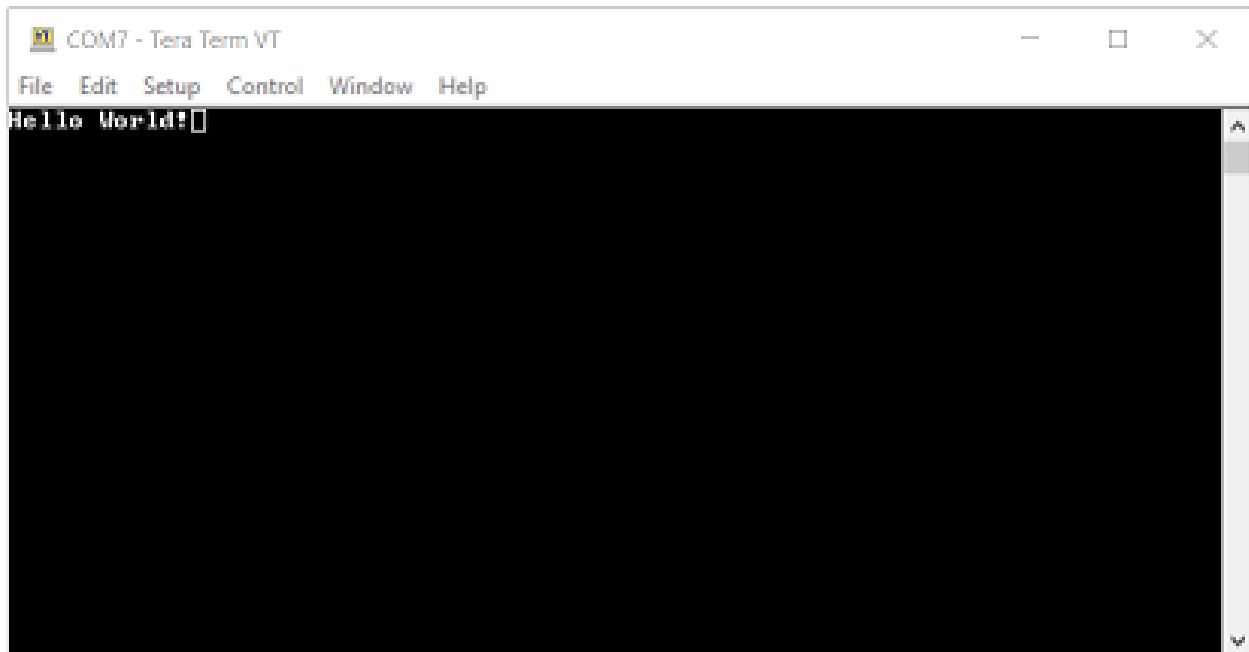

5. Revision History

5.1 Rev. A - 11/2019

First issue.

The Microchip Website

Microchip provides online support via our website at <http://www.microchip.com/>. This website is used to make files and information easily available to customers. Some of the content available includes:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip design partner program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

Product Change Notification Service

Microchip's product change notification service helps keep customers current on Microchip products. Subscribers will receive email notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, go to <http://www.microchip.com/pcn> and follow the registration instructions.

Customer Support

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Embedded Solutions Engineer (ESE)
- Technical Support

Customers should contact their distributor, representative or ESE for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in this document.

Technical support is available through the website at: <http://www.microchip.com/support>

Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Legal Notice

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with

your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AnyRate, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, chipKIT, chipKIT logo, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Klear, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PackeTime, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TempTrackr, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, FlashTec, Hyper Speed Control, HyperLight Load, IntelliMOS, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, Vite, WinPath, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BlueSky, BodyCom, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, INICnet, Inter-Chip Connectivity, JitterBlocker, KlearNet, KlearNet logo, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICTail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2019, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-5224-5300-0

AMBA, Arm, Arm7, Arm7TDMI, Arm9, Arm11, Artisan, big.LITTLE, Cordio, CoreLink, CoreSight, Cortex, DesignStart, DynamiQ, Jazelle, Keil, Mali, Mbed, Mbed Enabled, NEON, POP, RealView, SecurCore, Socrates, Thumb, TrustZone, ULINK, ULINK2, ULINK-ME, ULINK-PLUS, ULINKpro, μ Vision, Versatile are trademarks or registered trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere.

Quality Management System

For information regarding Microchip's Quality Management Systems, please visit <http://www.microchip.com/quality>.

Worldwide Sales and Service

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
<p>Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Tel: 480-792-7277 Technical Support: http://www.microchip.com/support Web Address: http://www.microchip.com</p> <p>Atlanta Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455</p> <p>Austin, TX Tel: 512-257-3370</p> <p>Boston Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088</p> <p>Chicago Itasca, IL Tel: 630-285-0071 Fax: 630-285-0075</p> <p>Dallas Addison, TX Tel: 972-818-7423 Fax: 972-818-2924</p> <p>Detroit Novi, MI Tel: 248-848-4000</p> <p>Houston, TX Tel: 281-894-5983</p> <p>Indianapolis Noblesville, IN Tel: 317-773-8323 Fax: 317-773-5453 Tel: 317-536-2380</p> <p>Los Angeles Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608 Tel: 951-273-7800</p> <p>Raleigh, NC Tel: 919-844-7510</p> <p>New York, NY Tel: 631-435-6000</p> <p>San Jose, CA Tel: 408-735-9110 Tel: 408-436-4270</p> <p>Canada - Toronto Tel: 905-695-1980 Fax: 905-695-2078</p>	<p>Australia - Sydney Tel: 61-2-9868-6733</p> <p>China - Beijing Tel: 86-10-8569-7000</p> <p>China - Chengdu Tel: 86-28-8665-5511</p> <p>China - Chongqing Tel: 86-23-8980-9588</p> <p>China - Dongguan Tel: 86-769-8702-9880</p> <p>China - Guangzhou Tel: 86-20-8755-8029</p> <p>China - Hangzhou Tel: 86-571-8792-8115</p> <p>China - Hong Kong SAR Tel: 852-2943-5100</p> <p>China - Nanjing Tel: 86-25-8473-2460</p> <p>China - Qingdao Tel: 86-532-8502-7355</p> <p>China - Shanghai Tel: 86-21-3326-8000</p> <p>China - Shenyang Tel: 86-24-2334-2829</p> <p>China - Shenzhen Tel: 86-755-8864-2200</p> <p>China - Suzhou Tel: 86-186-6233-1526</p> <p>China - Wuhan Tel: 86-27-5980-5300</p> <p>China - Xian Tel: 86-29-8833-7252</p> <p>China - Xiamen Tel: 86-592-2388138</p> <p>China - Zhuhai Tel: 86-756-3210040</p>	<p>India - Bangalore Tel: 91-80-3090-4444</p> <p>India - New Delhi Tel: 91-11-4160-8631</p> <p>India - Pune Tel: 91-20-4121-0141</p> <p>Japan - Osaka Tel: 81-6-6152-7160</p> <p>Japan - Tokyo Tel: 81-3-6880-3770</p> <p>Korea - Daegu Tel: 82-53-744-4301</p> <p>Korea - Seoul Tel: 82-2-554-7200</p> <p>Malaysia - Kuala Lumpur Tel: 60-3-7651-7906</p> <p>Malaysia - Penang Tel: 60-4-227-8870</p> <p>Philippines - Manila Tel: 63-2-634-9065</p> <p>Singapore Tel: 65-6334-8870</p> <p>Taiwan - Hsin Chu Tel: 886-3-577-8366</p> <p>Taiwan - Kaohsiung Tel: 886-7-213-7830</p> <p>Taiwan - Taipei Tel: 886-2-2508-8600</p> <p>Thailand - Bangkok Tel: 66-2-694-1351</p> <p>Vietnam - Ho Chi Minh Tel: 84-28-5448-2100</p>	<p>Austria - Wels Tel: 43-7242-2244-39 Fax: 43-7242-2244-393</p> <p>Denmark - Copenhagen Tel: 45-4450-2828 Fax: 45-4485-2829</p> <p>Finland - Espoo Tel: 358-9-4520-820</p> <p>France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79</p> <p>Germany - Garching Tel: 49-8931-9700</p> <p>Germany - Haan Tel: 49-2129-3766400</p> <p>Germany - Heilbronn Tel: 49-7131-72400</p> <p>Germany - Karlsruhe Tel: 49-721-625370</p> <p>Germany - Munich Tel: 49-89-627-144-0 Fax: 49-89-627-144-44</p> <p>Germany - Rosenheim Tel: 49-8031-354-560</p> <p>Israel - Ra'anana Tel: 972-9-744-7705</p> <p>Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781</p> <p>Italy - Padova Tel: 39-049-7625286</p> <p>Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340</p> <p>Norway - Trondheim Tel: 47-72884388</p> <p>Poland - Warsaw Tel: 48-22-3325737</p> <p>Romania - Bucharest Tel: 40-21-407-87-50</p> <p>Spain - Madrid Tel: 34-91-708-08-90 Fax: 34-91-708-08-91</p> <p>Sweden - Gothenberg Tel: 46-31-704-60-40</p> <p>Sweden - Stockholm Tel: 46-8-5090-4654</p> <p>UK - Wokingham Tel: 44-118-921-5800 Fax: 44-118-921-5820</p>